




1

Attach the sleeves to the rear of the blanking plate and tighten by hand (be careful not to overtighten as this can damage the blanking plate)

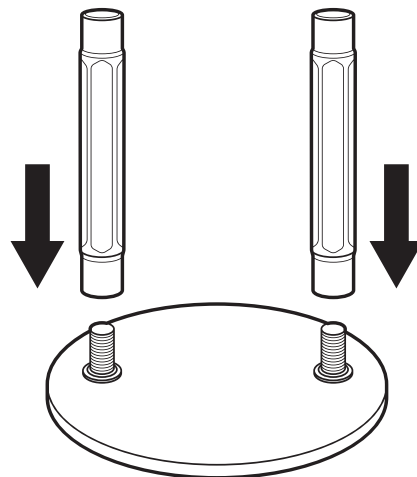

2

Align & Insert into the door pre-drilled holes from the outside of the door. Repeat for both top and/or bottom holes as desired.

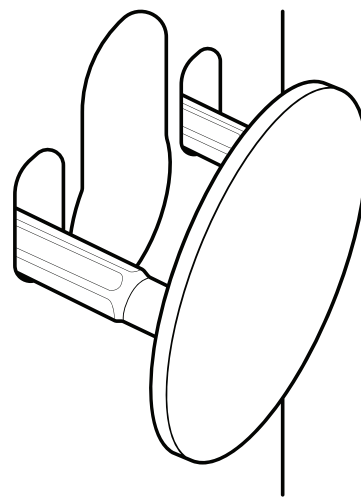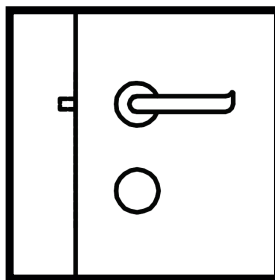

3

If using Blank opposite the door handle or push pad, you will need to cut the spindle to 65mm. Insert spindle & secure handle & blank in place with 5.5mm screws from the inside.

